

# Installation manual



# CONTENTS

Page

<b>1. System Overview</b>	<b>2</b>
1.1 Roundshot Livecam components	2
1.2 Livecam DSL and GSM versions	3
1.3 Livecam GSM version – 4G antenna – parking + operation position	4
1.4 Reset network settings + slot for SIM card	5
<b>2. Preparations Prior to Camera Shipment</b>	<b>6</b>
2.1 Site preparation	6
2.1.1. Installation of camera mast	7
2.1.2. Network connection – DSL network	12
2.1.3. Network connection – mobile network (4G)	13
2.1.4 Power connection – mains adaptor	14
2.1.5 Attaching mains adaptor with metallic box on a mast	15
2.1.6 Lightning protection (optional)	18
<b>3. Camera Installation</b>	<b>20</b>
3.1 Network connection DSL network	20
3.2 Network connection GSM network (4G)	25
3.3 Network connection trouble-shooting	31
3.4 Firewall settings	32
<b>4. Technical Data</b>	<b>33</b>
<b>5. CE Conformity Declaration</b>	<b>34</b>

## Impressum

# 1. System Overview

## 1.1 Roundshot Livecam components

This manual describes the Roundshot Livecam **generation 6**.

The system consists of the following elements:



- (A) Livecam using DSL connection (without GSM module/antenna)
- (B) Mains adaptor (Meanwell UHP-500 500W 24V) on waterproof aluminium box (optional)
- (C) Power supply cable 1m 220V (can also be supplied with EU or US power connector)
- (D) Ethernet cable shielded, standard 15m / 50ft or 30m / 100 ft (up to 100m possible)
- (E) Power cable maximum 15m (50ft)

## 1.2 Livecam DSL and GSM versions



**Livecam Generation 6  
mit DSL Verbindung (RJ45)**



**Livecam Generation 6  
mit 4G GSM Router + Antenne**



Allen key to open slot cover: 3mm



Allen key to open cover screws: 5mm  
(with short angled head max. 20mm)

(not supplied with Livecam system)


### 1.3 Livecam GSM version - 4G antenna – parking + operation position



**Livecam Generation 6  
with 4G GSM router + antenna**

**4G antenna in parking position for  
transport/dispatch**

**4G antenna in operating position**

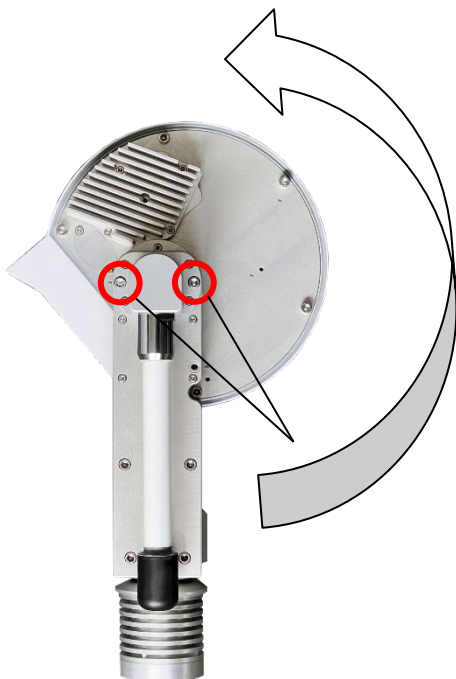

- Open up the two screws using a 5mm allen key
- Turn the antenna by 180° up
- Tighten the two screws completely




Make sure that the two screws to fix the antenna are completely fastened.

## 1.4 Reset network settings + slot for SIM card



Open the two screws with an allen key

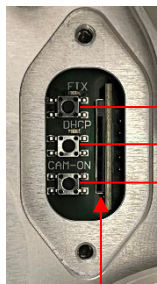

Push the button to reset the network settings:

**Fixed IP (192.168.1.80) - standard DHCP**  
Camera on (only for maintenance)

} The current setting is indicated by a permanently lit green LED.

The camera needs to be connected to power.

Slot for large **GSM SIM card** (only for model with 4G GSM router + antenna)



## 2. Preparations prior to camera shipment

### 2.1 Site preparation

The customer is responsible for selecting the camera site and preparing for the installation of the camera. Proper site preparation includes:


- Selection of best **camera position** (ideally with 360° view)
- Installation of **camera mast**
- Selection of **connection type** (wired Ethernet, wifi or cellular 4G)
- Preparation of **network connection** requirements:
  - DHCP or fixed IP
  - Firewall settings as required
- Preparation of **power connection** 110V or 220V with protected location for mains adaptor (for example in waterproof box if installed outdoors)
- Installation of **power supply** and lightning/surge protection
- Installation of **power cable** - maximum length: 15m / 50 ft
- Installation of **Ethernet cable** (if wired) – maximum length: 100m (or longer if connecting through switch)





## 2.1.1. Installation of camera mast

### Mast types

Wall attachment with straight tube

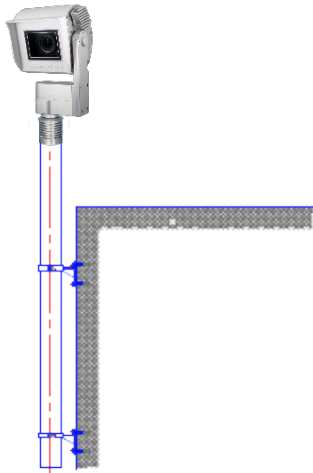


Wall attachment with curved tube

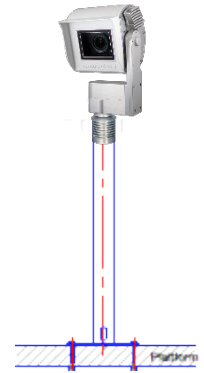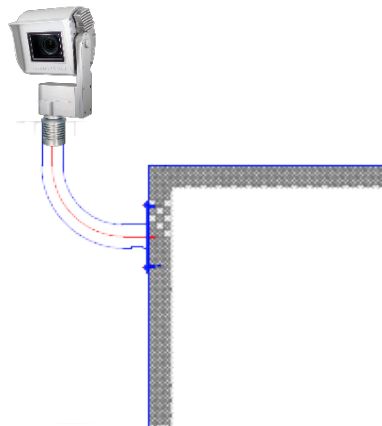

Stand-up tube for flat attachment on ground

Roof attachment  
(roof pass-through)

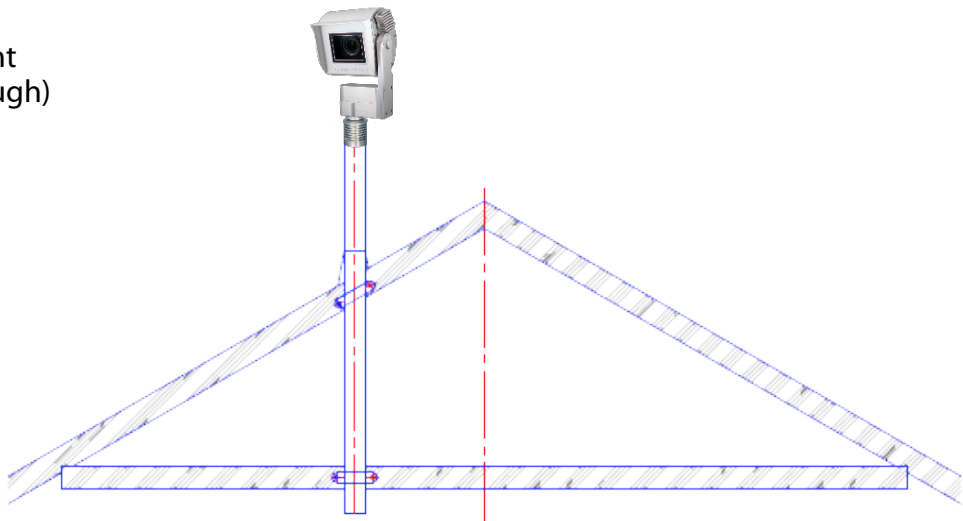


**Very important:** The mast must be grounded.



To protect against **cyber attacks**, the camera must be installed in such a way that it is physically inaccessible without special equipment, for example on a mast or a roof that is inaccessible without a key.


### 2.1.1. Installation of camera mast (continued)

#### Camera dimensions (1/2)

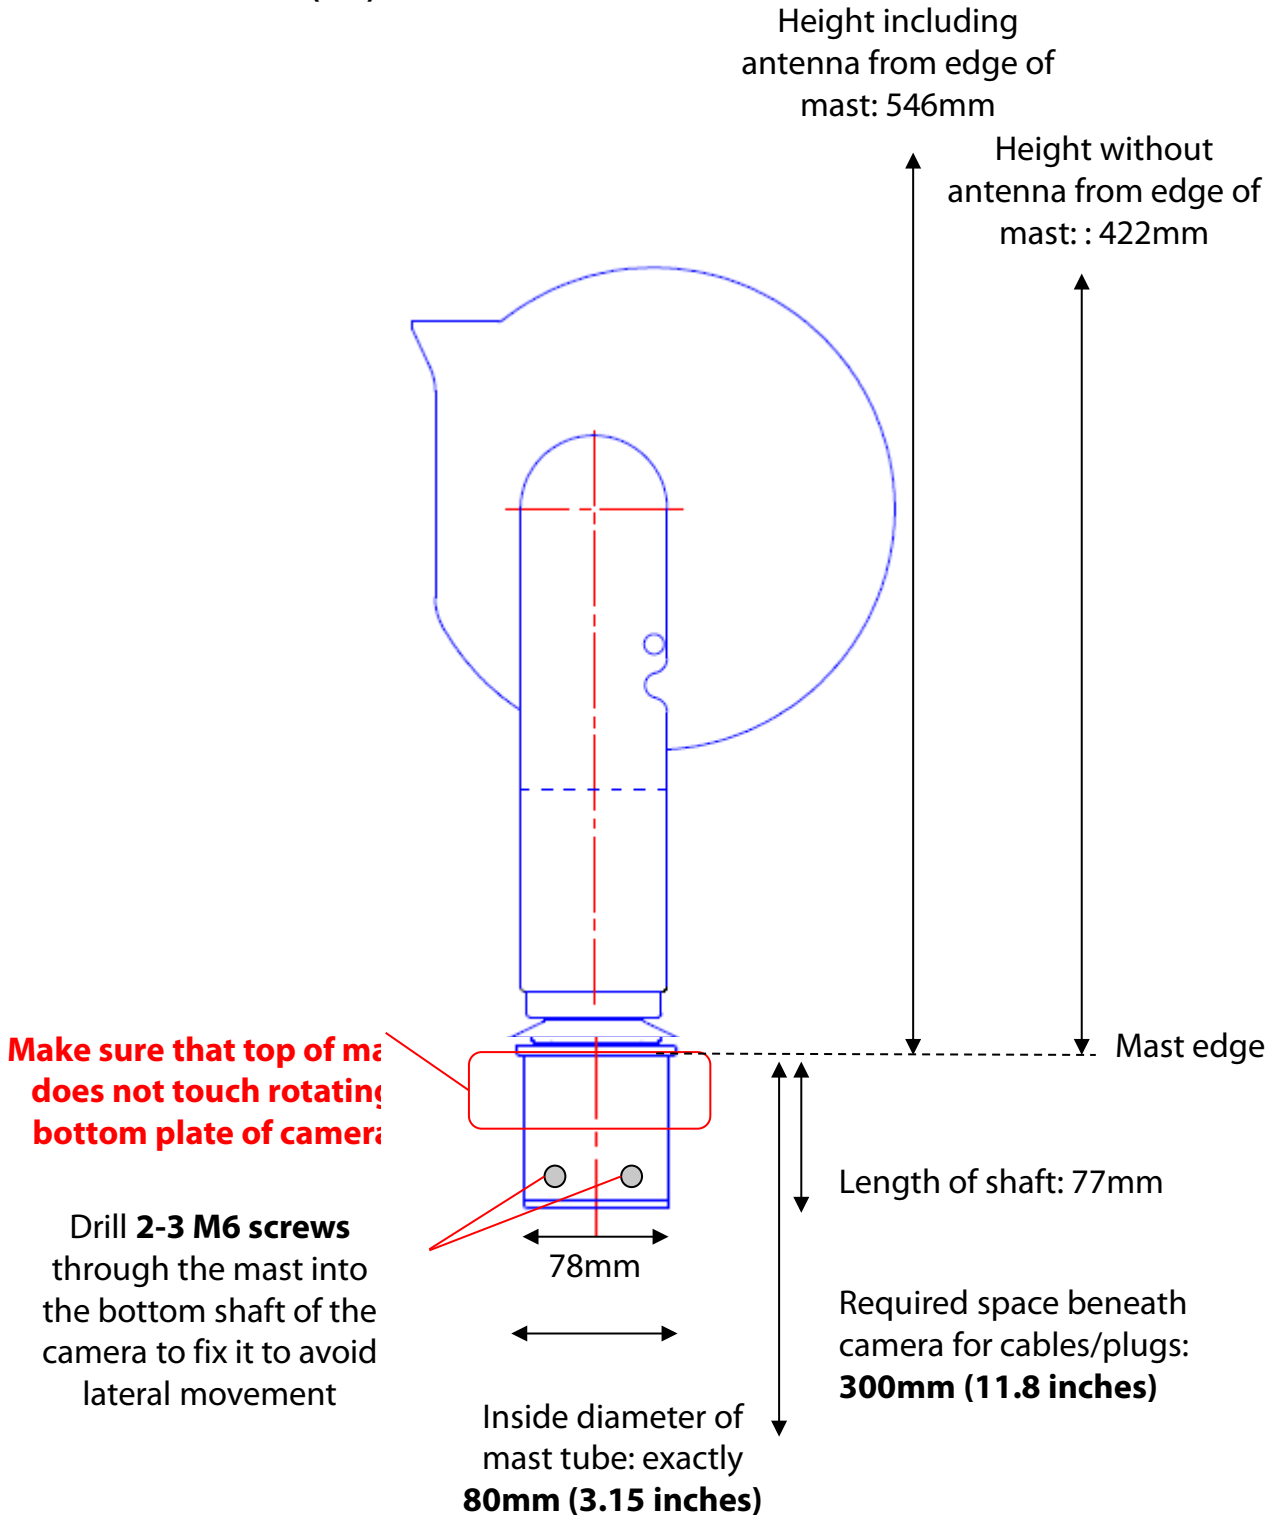

## 2.1.1. Installation of camera mast (continued)


### Camera dimensions (2/2)

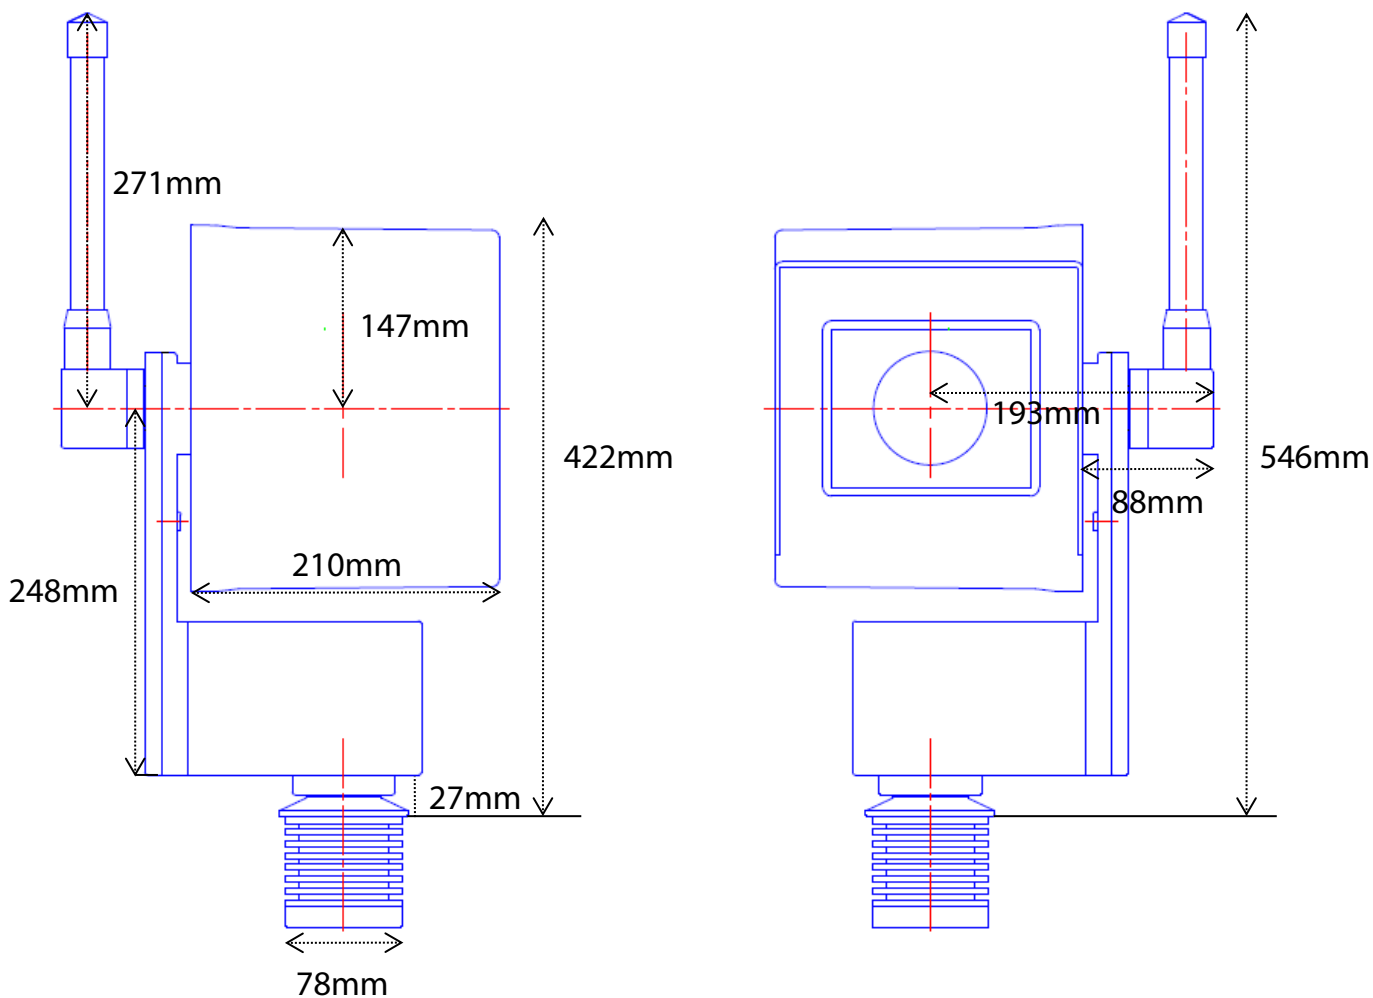

## 2.1.1. Installation of camera mast (continued)


### Correct mounting

**Incorrect mounting**  
(camera motor sits on mast  
inner dimensions of mast > 80 mm)

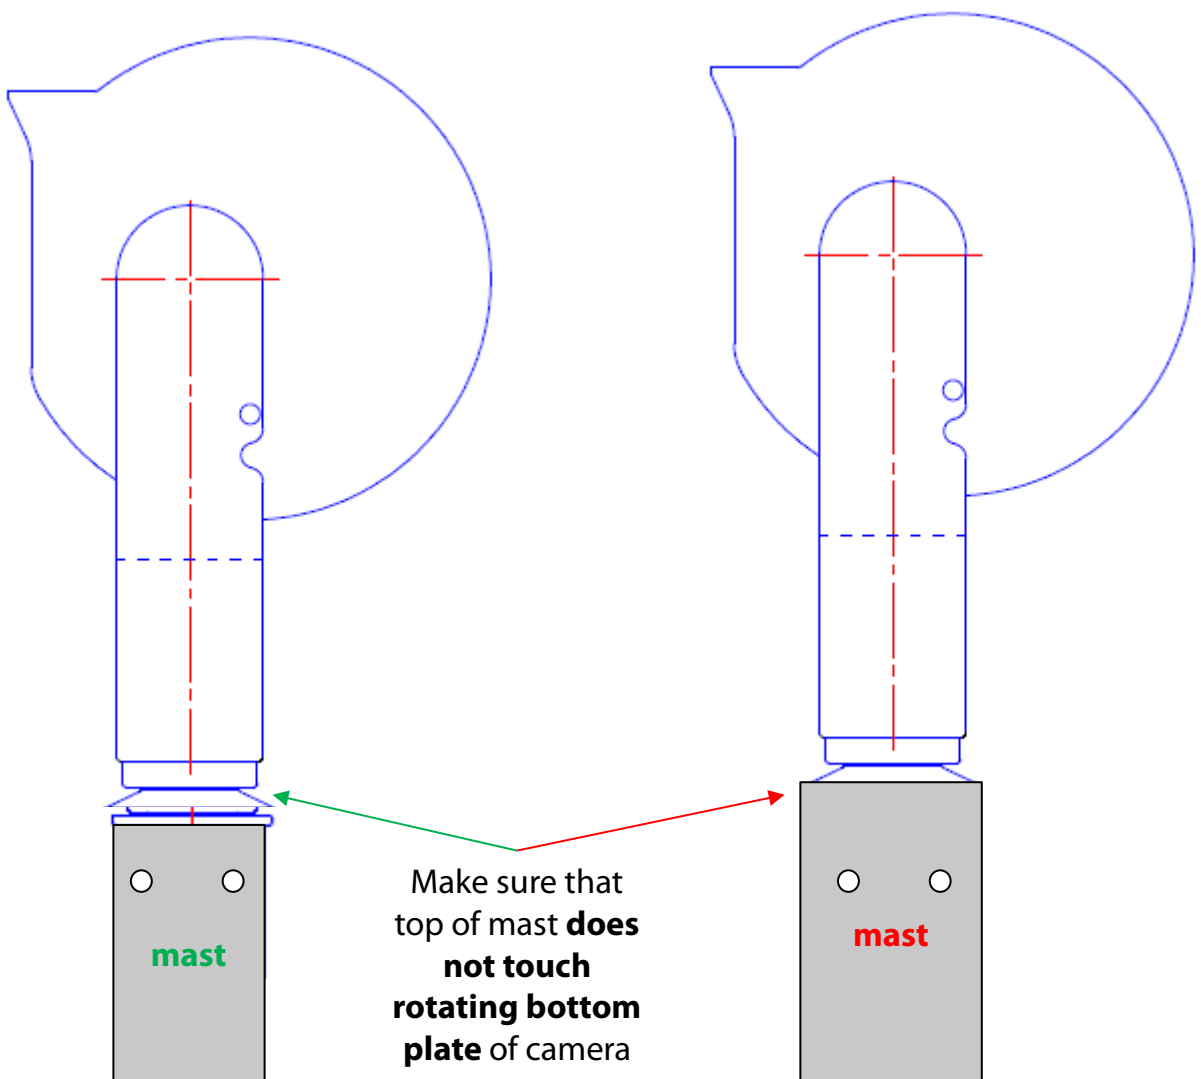

## 2.1.1. Installation of camera mast (continued)

### Camera cable connectors – ferrite elements

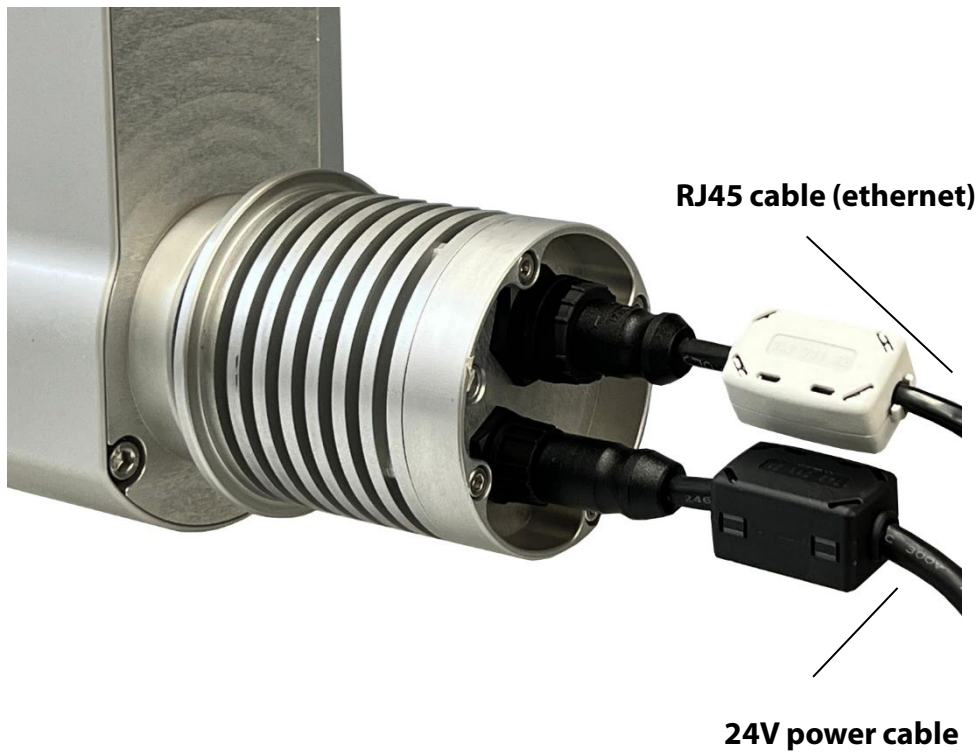

**The ferrite elements are installed on the cable strands close to the camera.** Installing them on the opposite side of the cable is possible but will be less beneficial for the camera.



Ferrite beads are used in electronic circuits to suppress interference, noise, crosstalk, and other high-frequency disturbances from supply voltage lines, data signal lines, and ground planes.

## 2.1.2. Network connection – DSL network

### Power cable


Pin 2 = +24 V  
Pin 3 = -



### Ethernet cable (RJ45)

IP:

- DHCP or
- fixed IP

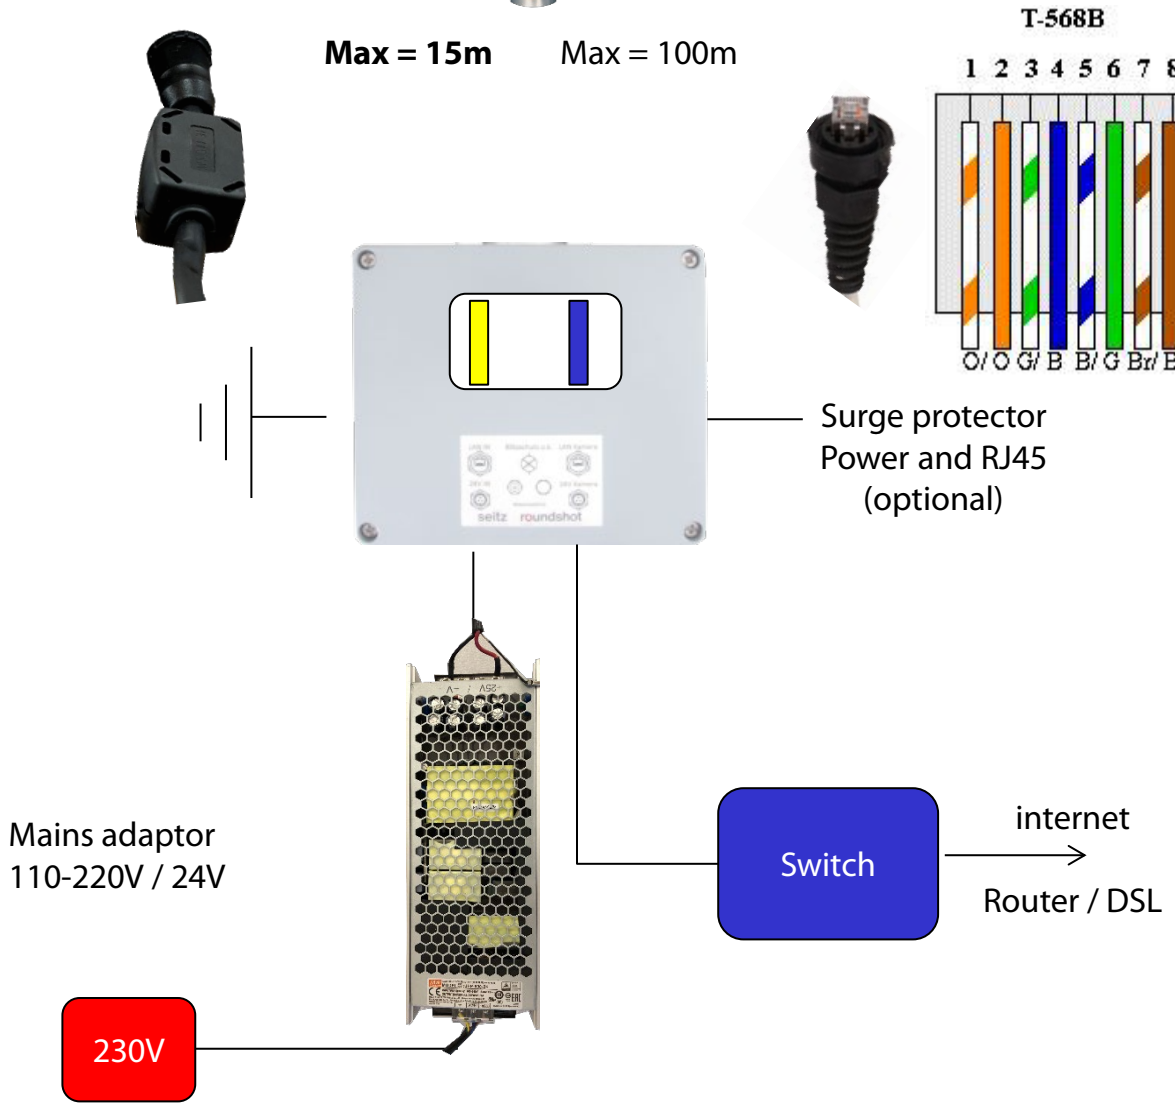

- Please provide the following network data to Roundshot prior to shipping:
  - IP through DHCP (automatically assigned by switch/router/network)
  - Fixed IP (IP, subnet mask + gateway + DNS1 + DNS2)

### 2.1.3. Network connection –mobile network (4G)

#### Power cable



Pin 2 = +24V  
Pin 3 = -




mobile network (4G)

IP: DHCP

Max = 15m

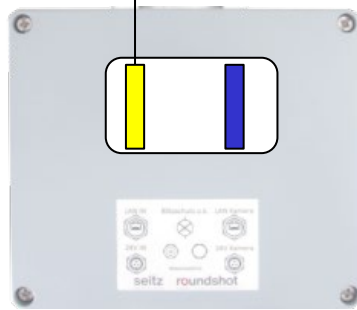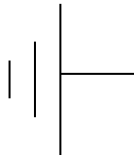


Netzteil  
110-220V / 24V

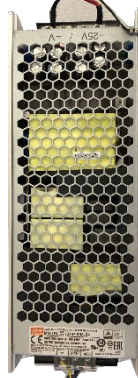

Please confirm to Roundshot prior to shipping that the camera will be connected through 4G and send us the 4G SIM card for integration + testing.


## 2.1.4. Power connection – mains adaptor

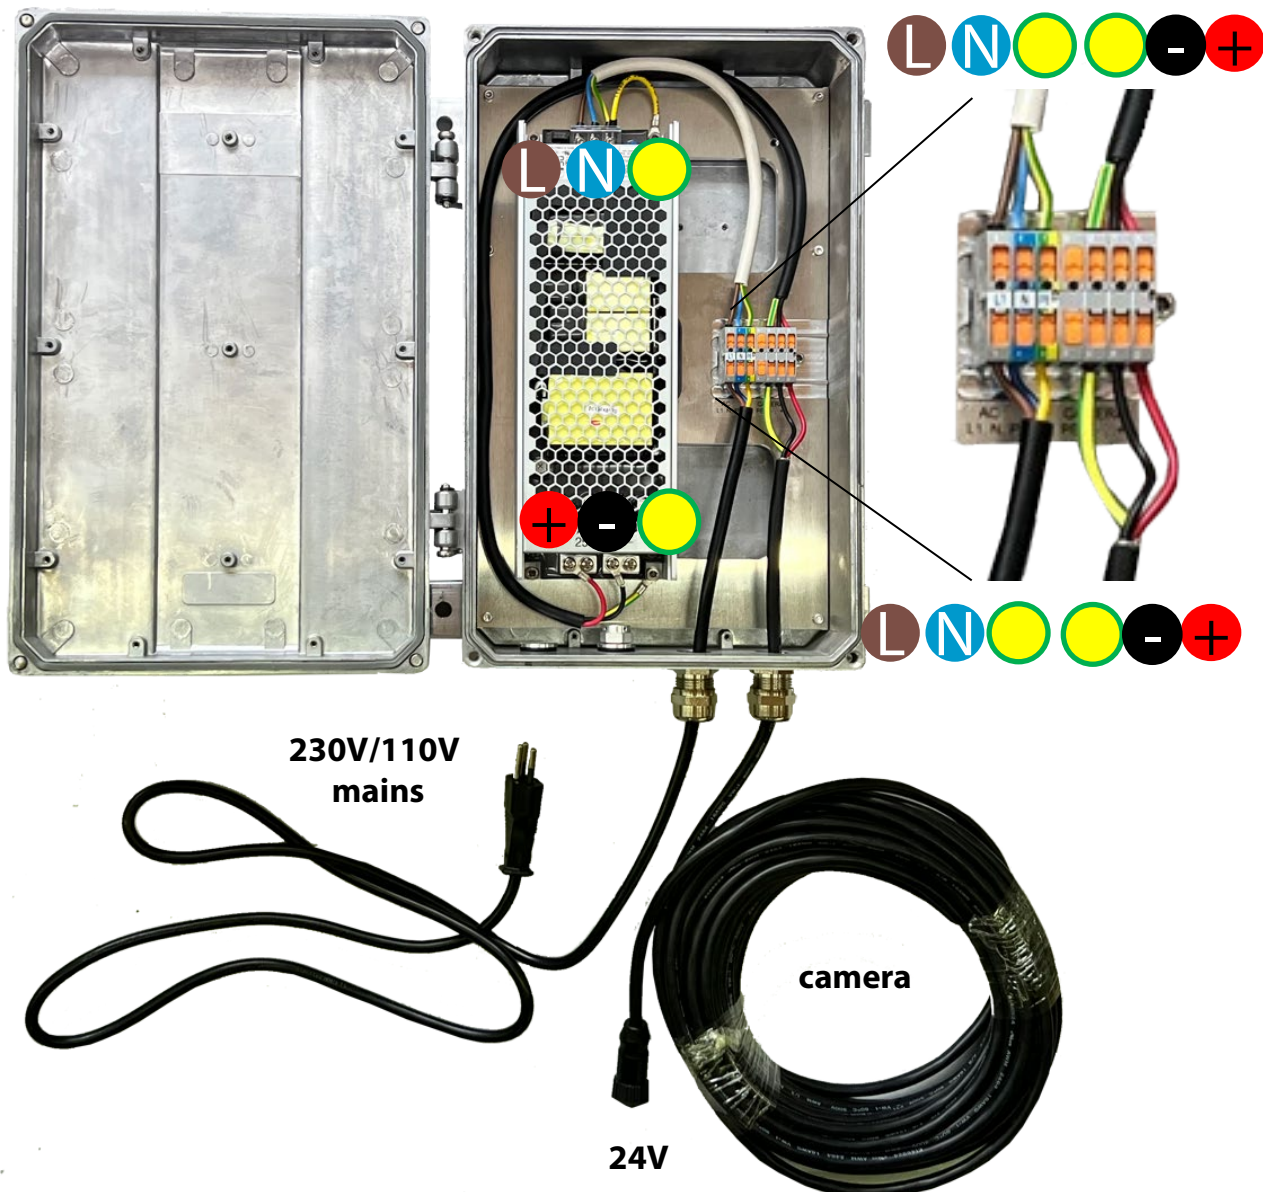

**Very important:** The mains adaptor casing must be connected by cable (yellow/green) to the ground.


## 2.1.5 Attaching mains adaptor with metallic box on a mast

### Pole installation

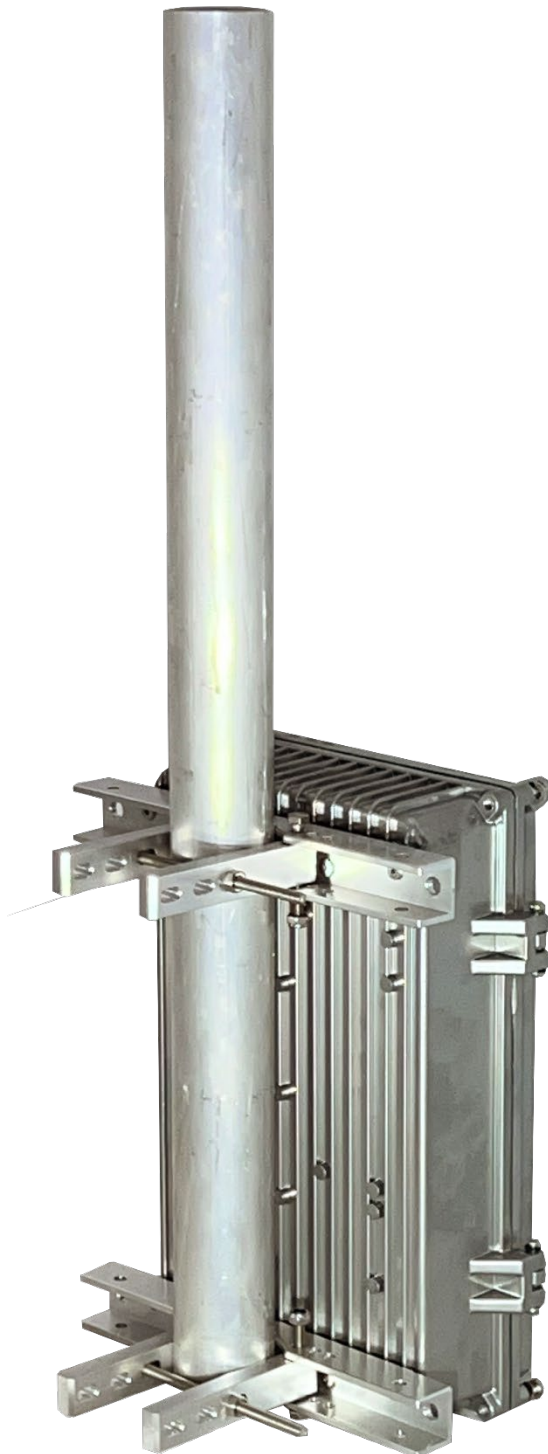

## 2.1.5 Attaching mains adaptor with metallic box on a mast (continued)

### Mast installation (outside diameter 90mm)

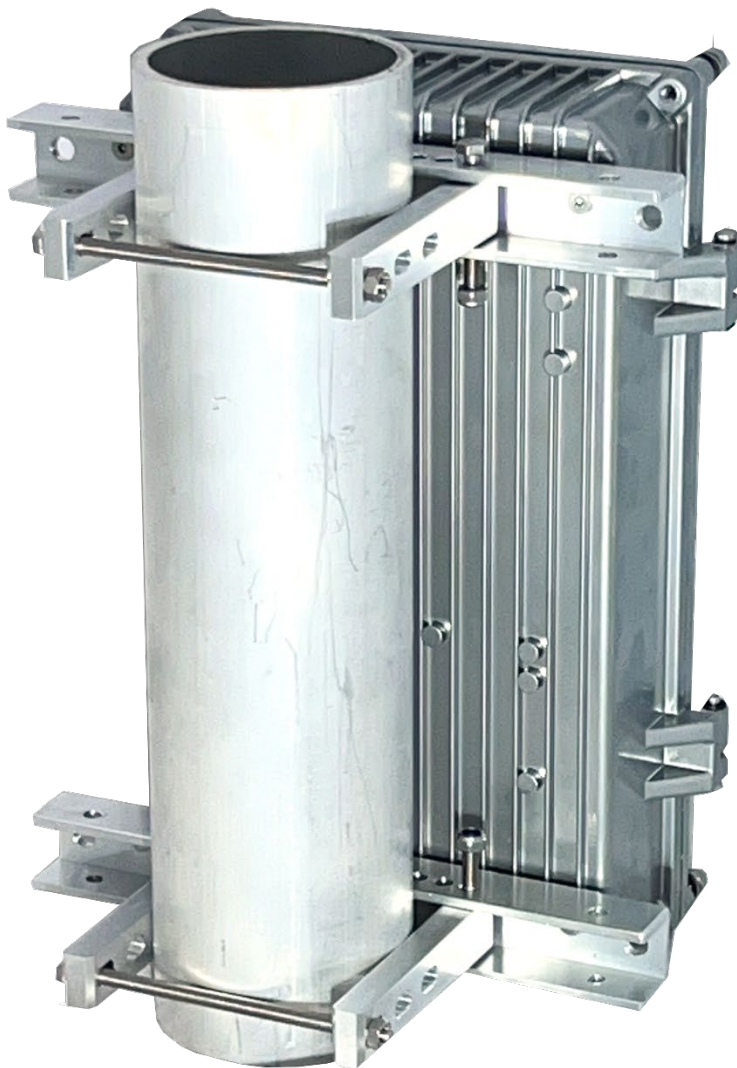


## 2.1.5 Attaching mains adaptor with metallic box on a mast (continued)

### Installation on larger structure (for example tower)



## 2.1.6. Lightning protection (optional)

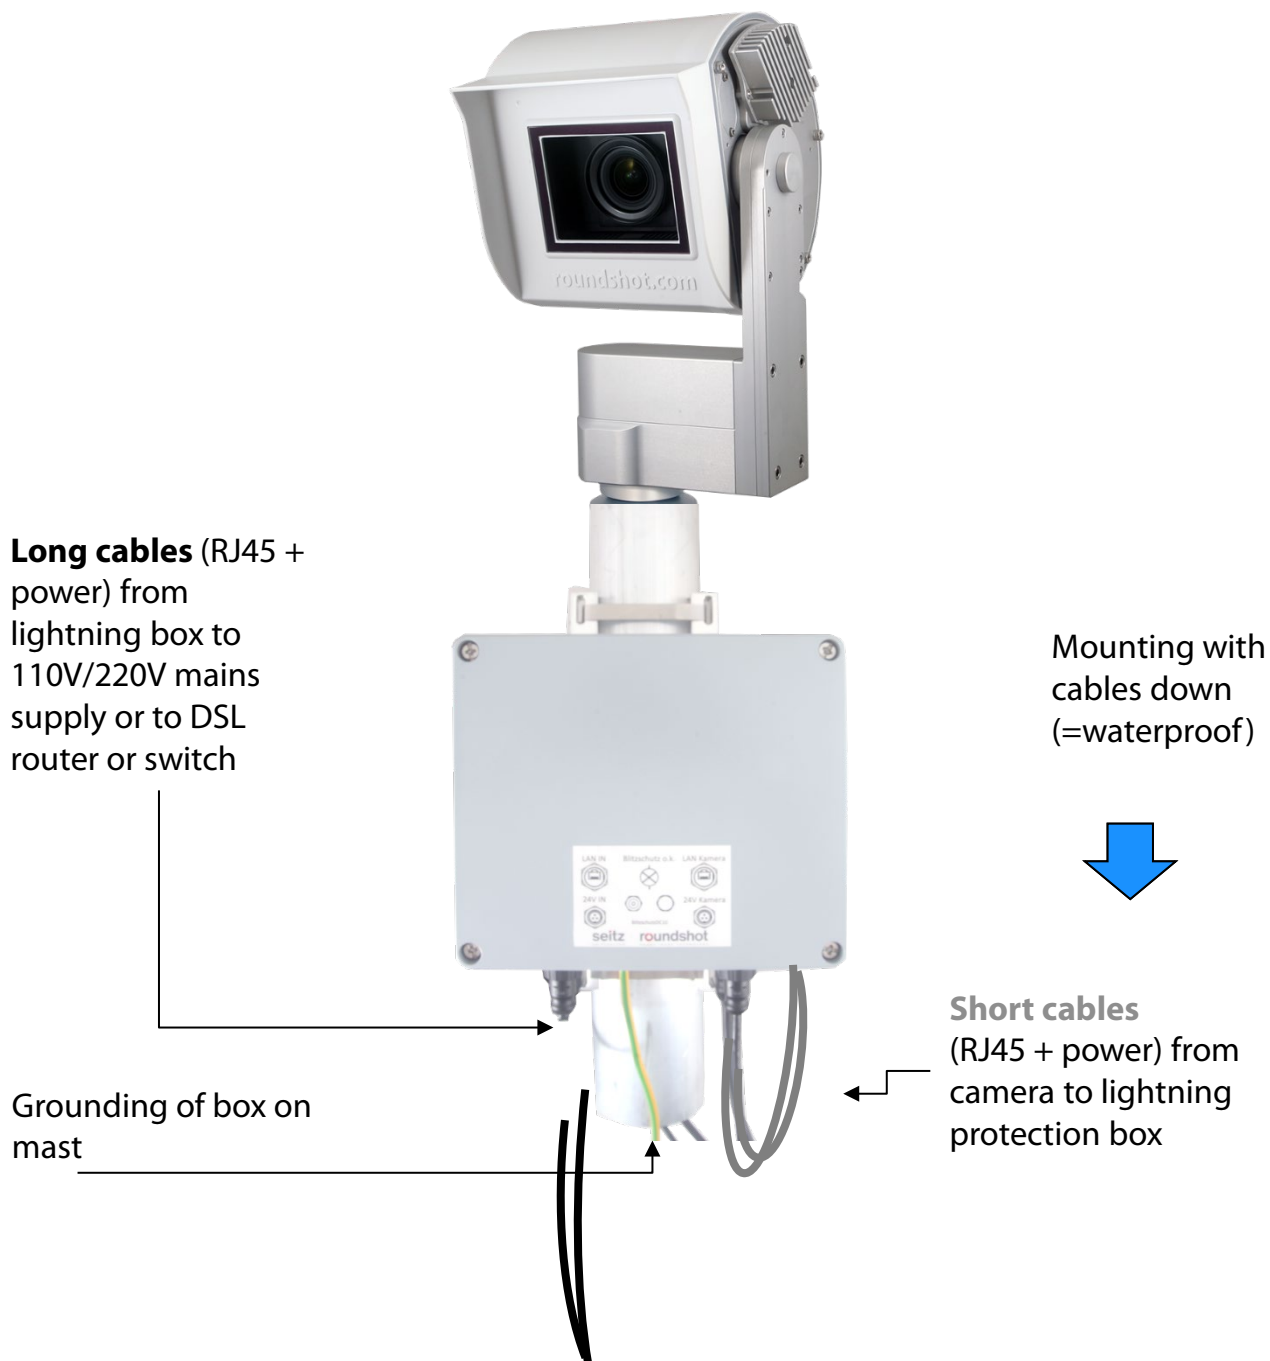


- The optional lightning protection is installed closely beneath the camera on the mast
- It protects the camera from being damaged by lightning (overcharge) induced by the cables into the camera housing
- An opening of about 5cm diameter (2 inches) needs to be drilled into the mast to pass the cables to the lightning protection box through the mast

## 2.1.6. Lightning protection (optional) – (continued)

Box open:

Grounding cable to cover

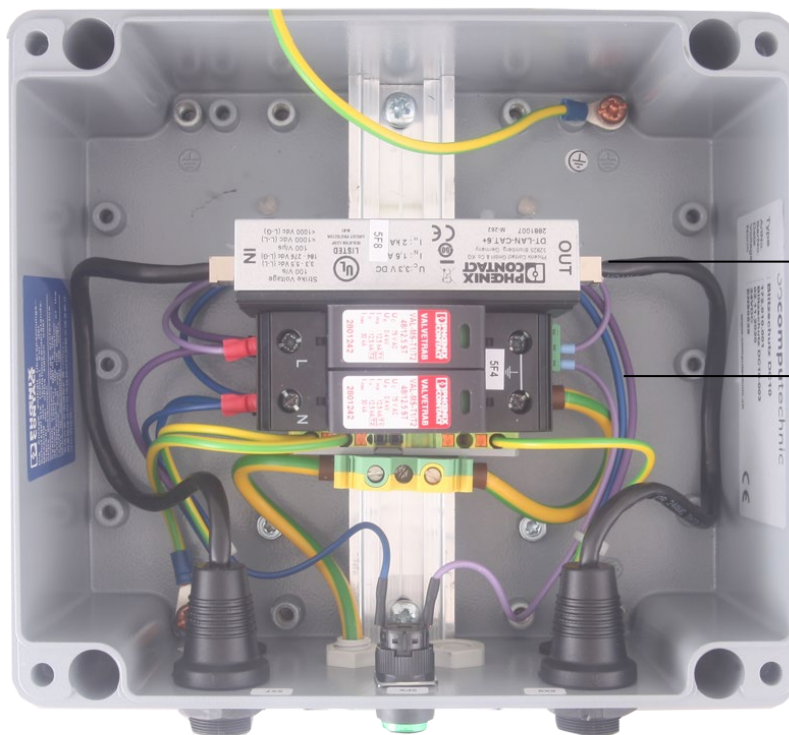

Lightning protection RJ45

Lightning protection power (L + N)

Box from below


Power-LED "OK"

RJ45 cable long (to DSL router/switch)

RJ45 short (to camera)

Power cable long (to mains adaptor)

Power cable short (to camera)

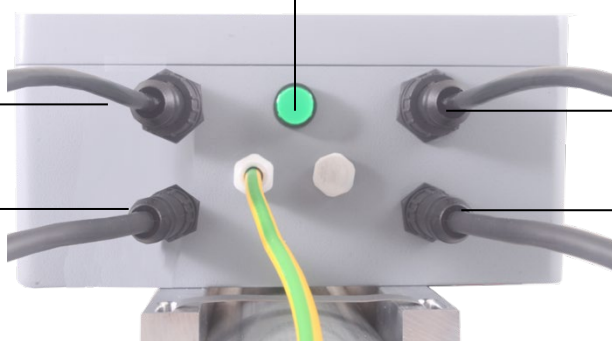

Grounding cable (on mast)



When installing the box there is no need to open it – just attach it on the mast and connect the cables



**Very important:** The mast needs to be grounded.

# 3. Camera installation

## 3.1 Network connection DSL network


Please **test the network connection in the office before installing** the Livecam on the mast. This avoids lengthy installations/deinstallations.

Before shipping the Roundshot team will prepare the network card of the Livecam computer according to customer instructions:

- **DHCP** (to assign automatically by switch/router/network (standard case for private or small networks)
- **Fixed IP** (for larger networks where IPs are assigned by network administrator)

In this case the Livecam should connect to internet automatically once installed.


Please allow 5-10 minutes for the camera to power up, calibrate itself and obtain the IP or register in the network. Once the internet connection is established, the Livecam will automatically log in at the Roundshot VPN server and the Roundshot staff can connect to the camera.

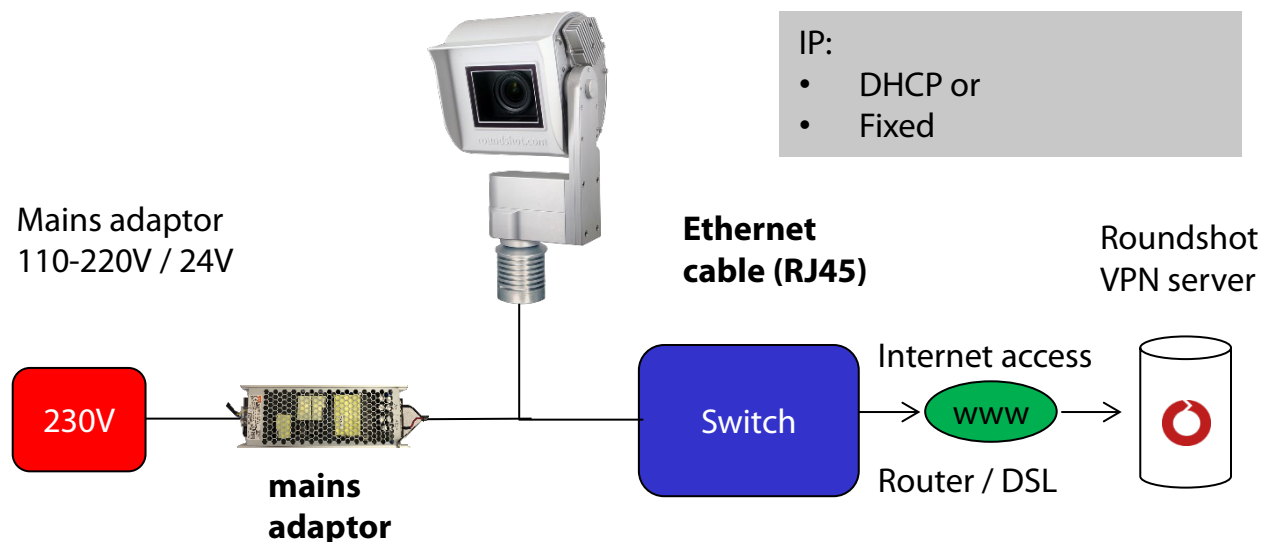

Contact the Roundshot team who will check if the connection to the VPN (remote access to camera) has been successfully established.



If yes, we will now connect to the camera to configure it for service.

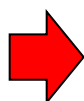

If no, please go to section «problem solving» to establish the connection.

### 3.1 Network connection DSL network (continued)

To connect to the Livecam, the first step is to **determine the IP that is currently used by the camera computer.**

- If the Livecam will use a **fixed IP**, this fixed IP has already been sent to roundshot and set in the network configuration of the computer, so you will be able to use that IP.
- If the Livecam is obtaining its **IP automatically** through **DHCP**, there are two ways to obtain its IP:
  - a. By having the camera powered up and connected by RJ45 cable within the network and using an IP scanner software (such as Angry IP Scanner: <https://angryip.org/download>)
  - b. By resetting the camera computer to a fixed IP (192.168.1.80) using a hardware reset button -> see chapter 3.3 Network connection trouble-shooting
- If all of the above fails, it is also possible to use the **Livecam serial number** to connect: **roundshot\_#####** where the last 12 digits represent the computer mac address. This serial number can be found:
  - on the camera front panel (above lens)
  - on the Livecam invoice
  - by scanning the network for new IPs / mac addresses
  - by contacting roundshot

Bring your **computer network configuration** into the same range as follows – for example:




camera IP: 192.168.1.80  
subnet mask: 255.255.255.0  
gateway 192.168.1.1

computer IP: 192.168.1.70



Download VNC Viewer (RealVNC, not Ultra VNC) and connect to the camera computer:

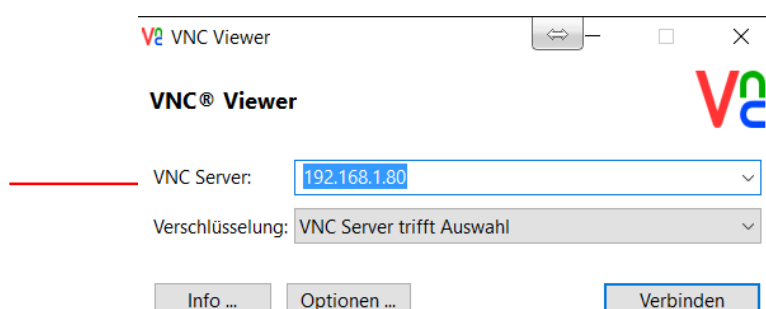


### 3.1 Network connection DSL network (continued)

**User:** camera-IP or roundshot serial number (roundshot\_#####)


**Password:** \*\*\*\*\*

This opens a connection to the Livecam computer :

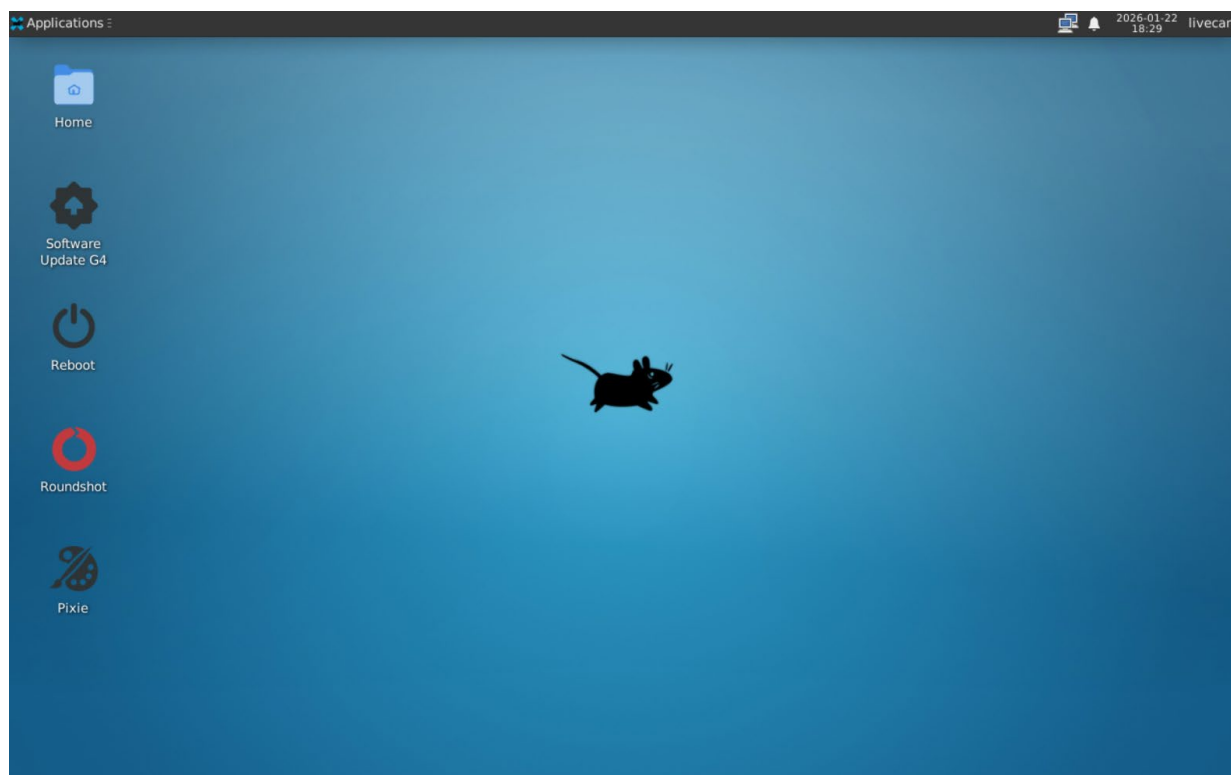


### 3.1 Network connection DSL network (continued)

Now open up the **edit connections menu** with a right-mouse click on the two computers next to the clock on the upper-right corner of the screen:

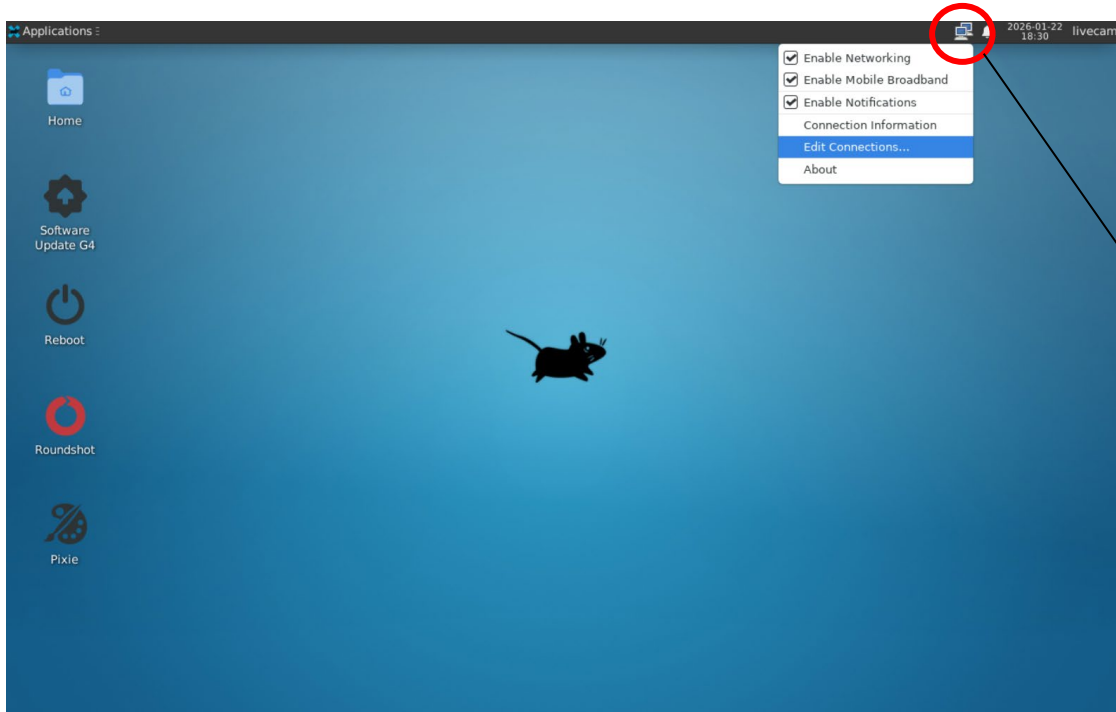

Right mouse-click

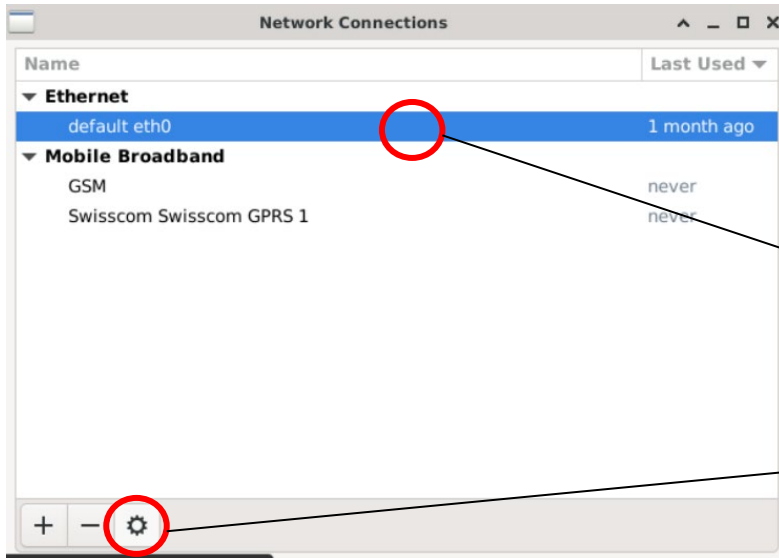

Click on first ethernet connection (default eth0) + on gear symbol

### 3.1 Network connection DSL network (continued)

Click on the IPv4 Settings tab and select the preferred **method**:

- Manual (fixed IP)
- DHCP (automatic IP)

When choosing “Manual” please enter the **complete network parameters** including IP (address), subnet mask (Netmask), gateway + DNS + Search Domains, for example:

The screenshot shows the 'Editing default eth0' window with the 'IPv4 Settings' tab selected. The 'Method' dropdown is set to 'Automatic (DHCP)'. Under 'Additional static addresses', there are empty fields for Address, Netmask, and Gateway. The 'Additional DNS servers' field contains '1.1.1.1, 1.0.0.1, 8.8.8.8, 8.8.4.4'. There are 'Add' and 'Delete' buttons for the addresses table. At the bottom, there are 'Cancel' and 'Save' buttons.

The screenshot shows the 'Editing default eth0' window with the 'IPv4 Settings' tab selected. The 'Method' dropdown is set to 'Manual'. The 'Addresses' table has one entry: Address '192.168.178.13', Netmask '24', and Gateway '192.168.178.1'. The 'DNS servers' field contains '1.1.1.1, 8.8.8.8'. There are 'Add' and 'Delete' buttons for the addresses table. At the bottom, there are 'Cancel' and 'Save' buttons.

When entering the subnet mask (Netmask), the values will be indicated in binary power format, for example:

$$255.255.255.0 = 24$$

where 255 represents 256 digits (0..255) and is denoted  $2^8$   
and  $255.255.255.0 = 2^8 * 2^8 * 2^8 = 2^{24}$

Press “**Save**” and “**Close**” to return to the desktop.

### 3.2 Network connection with GSM network (4G)


Please **test the network connection in the office before installing** the Livecam on the mast. This avoids lengthy installations/deinstallations.

For Livecams that connect to the network by wifi or by mobile network a **special module** needs to be installed in the camera computer. Please make sure to specify this requirement when ordering the camera.

In this case, **the Roundshot team will set the IP for the camera computer to DHCP and preconfigure the APN settings of your data plan provider.**

If it is necessary to reconfigure the APN settings, please set the IP to fixed (192.168.1.80, see page 5 for instructions) and connect as follows:

Connect a laptop or other computer directly to the camera:

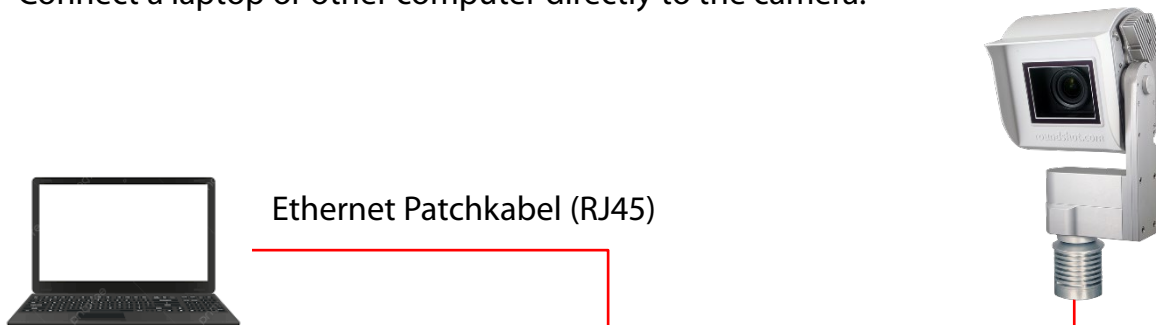

Set the IP of your computer (ethernet card) within the same range and subnet as the camera, for example:

IP-Adresse automatisch beziehen

Folgende IP-Adresse verwenden:

IP-Adresse:

Subnetzmaske:

Standardgateway:

DNS-Serveradresse automatisch beziehen


Folgende DNS-Serveradressen verwenden:

Bevorzugter DNS-Server:

Alternativer DNS-Server:

### 3.2 Network connection with GSM network (4G) – (continued)


Download and install a **VNC software** to establish the connection, for example VNC Viewer. Enter the fixed IP of the camera to connect:

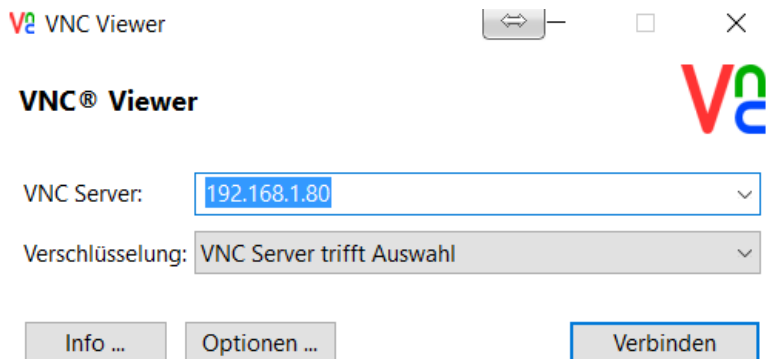


**User:** camera IP oder roundshot\_serial number (roundshot\_#####)

**Password:** \*\*\*\*\*

This opens a connection to the Livecam computer:

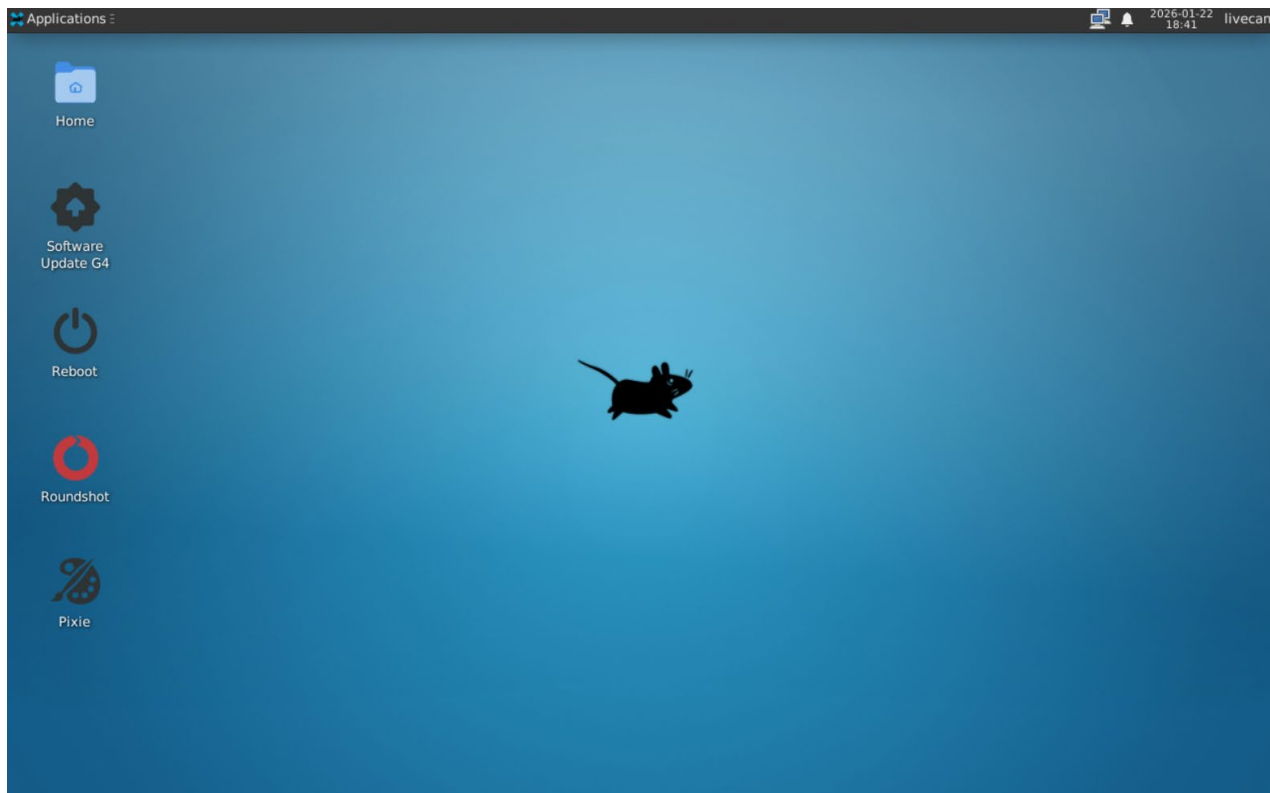


### 3.2 Network connection with GSM network (4G) – (continued)

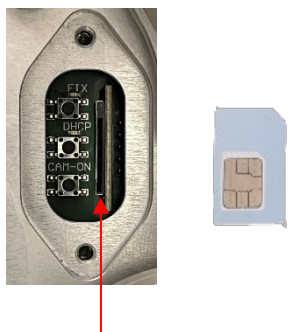


Slot for a large **GSM SIM card** (only for model with 4G GSM router +antenna)

**PIN:** The PIN code must first be removed from the SIM card (for example, using a mobile phone).

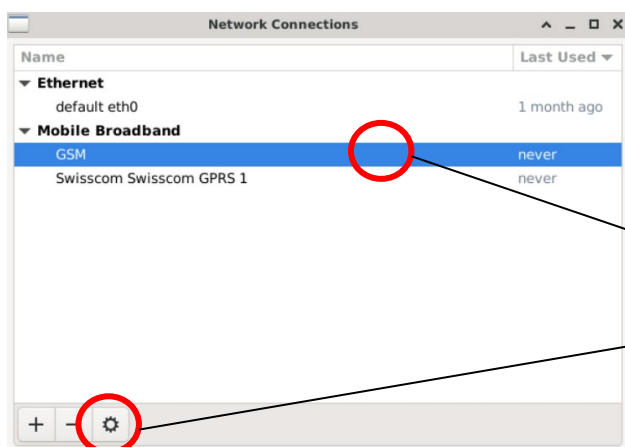

Öffnen Sie das Menü **“Edit Connections”** und klicken Sie auf **«mobile broadband»** + **«GSM»** und **«gear button»**.

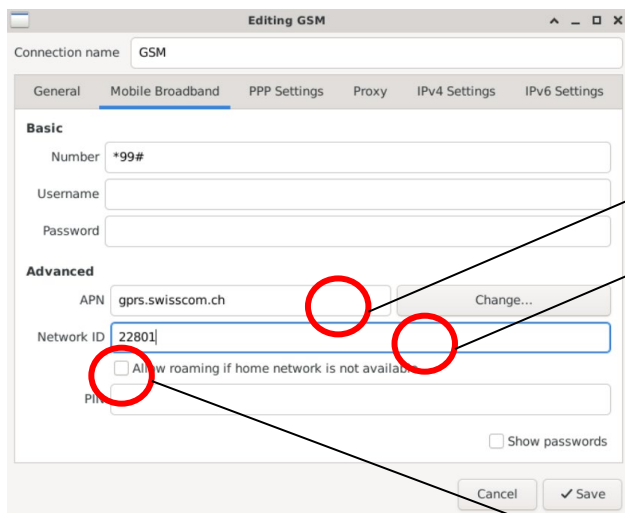

Enter the following data:

- APN of your provider
- **Network ID** of your provider to always lock the connection. This prevents potential roaming.

Make sure that the option **«Allow roaming if home network is not available»** is **not activated** (not ticked).

### 3.2 Network connection with GSM network (4G) – (continued)

APN + Network IDs of some providers in Switzerland, France + Italy:

Provider	Land	Number	User name	Password	APN	Network ID
Swisscom	Schweiz	*99#			gprs.swisscom.ch	22801
Sunrise	Schweiz	*99#			internet	22802
Salt (Orange)	Schweiz	*99#			internet	22803
Digital Republic (Sunrise)	Schweiz	*99#			dr.m2m.ch	22802
Orange	Frankreich	*99#	orange	orange	orange.fr	20801
SFR	Frankreich	*99#			wapsfr / s12sfr	20810
TIM	Italien	*99#			ibox.tim.it	22201

The screenshot shows a window titled "Editing GSM" with several tabs: General, Mobile Broadband (selected), PPP Settings, Proxy, IPv4 Settings, and IPv6 Settings. Under the "Basic" section, there are input fields for "Number" (containing \*99#), "Username", and "Password". Under the "Advanced" section, there are input fields for "APN" (containing gprs.swisscom.ch) and "Network ID" (containing 22801). There is also a checkbox for "Allow roaming if home network is not available" and a "PIN" input field. The PIN field is circled in red, and a black arrow points from it towards the text below.

**PIN:** The PIN code must first be removed from the SIM card (for example, using a mobile phone).

Confirm all settings with «**save**».



The APN settings of your GSM provider can be found by a google search, for example "APN settings orange france".

## 3.2 Network connection with GSM network (4G) – (continued)

Editing GSM

Connection name: GSM

General | **Mobile Broadband** | PPP Settings | Proxy | IPv4 Settings | IPv6 Settings

**Basic**

Number: \*99#

Username: \_\_\_\_\_

Password: \_\_\_\_\_

**Advanced**

APN: gprs.swisscom.ch **Change...**

Network ID: 22801

Allow roaming if home network is not available

PIN: \_\_\_\_\_

Show passwords

Cancel Save

It is also possible to use the **Set-up Assistant** by clicking on **“Change”**:

The Set-up Assistant will guide you step-by-step through selecting the country, provider and billing plan to obtain the correct APN settings:

Cancel Next

**Set up a Mobile Broadband Connection**

Set up a Mobile Broadband Connection

Choose your Provider's Country or Region

Choose your Provider

Choose your Billing Plan

Confirm Mobile Broadband Settings

This assistant helps you easily set up a mobile broadband connection to a cellular (3G) network.

You will need the following information:

- Your broadband provider's name
- Your broadband billing plan name
- (in some cases) Your broadband billing plan APN (Access Point Name)

Cancel Back Next

**Choose your Provider's Country or Region**

Set up a Mobile Broadband Connection

Choose your Provider's Country or Region

Choose your Provider

Choose your Billing Plan

Confirm Mobile Broadband Settings

Country or region:

- Slovakia
- Slovenia
- South Africa
- South Korea
- Spain
- Sri Lanka
- Sudan
- Sweden
- Switzerland**

Cancel Back Next

**Choose your Provider**

Set up a Mobile Broadband Connection

Choose your Provider's Country or Region

**Choose your Provider**

Choose your Billing Plan

Confirm Mobile Broadband Settings

Select your provider from a list:

Provider

- Lycamobile
- M-Budget
- Salt
- Sunrise
- Swisscom**

I can't find my provider and I wish to set up the connection manually.

My provider uses GSM technology (GPRS, EDGE, UMTS, HSPA)

Cancel Back Next

**Choose your Billing Plan**

Set up a Mobile Broadband Connection

Choose your Provider's Country or Region

Choose your Provider

**Choose your Billing Plan**

Confirm Mobile Broadband Settings

Select your plan:

Swisscom GPRS

Selected plan APN (Access Point Name):

gprs.swisscom.ch

**Warning:** Selecting an incorrect plan may result in billing issues for your broadband account or may prevent connectivity.

If you are unsure of your plan please ask your provider for your plan's APN.

Cancel Back Apply

**Confirm Mobile Broadband Settings**

Set up a Mobile Broadband Connection

Choose your Provider's Country or Region

Choose your Provider

Choose your Billing Plan

**Confirm Mobile Broadband Settings**

Your mobile broadband connection is configured with the following settings:

Your Provider:

Swisscom, Switzerland

Your Plan:

Swisscom GPRS

APN: gprs.swisscom.ch

Confirm all settings by pressing **«apply»** and **“save”**.

### 3.2 Network connection with GSM network (4G) – (continued)

The camera is now connected to your GSM network. Unplug your ethernet cable.

After a reboot the camera will connect to the GSM network within 5-10 minutes.

Contact the Roundshot team who will check if the connection to the VPN (remote access to camera) has been successfully established.



If yes, go ahead with the installation of the camera on the mast. Once the camera is installed, the Roundshot team will now connect to the camera to configure it for service.



If no, please go to section «trouble-shooting» to establish the connection.


### 3.3 Network connection trouble-shooting

If the connection cannot be established please follow these steps:

1. Is the power cable with mains adaptor plugged-in and is the camera powered-up? If so, the fans turn which creates a distinctive noise (even with closed waterproof case).
2. Do you know the IP of your camera? The standard (factory) IP is 192.168.1.80.
3. Have you set **the correct IP** on your computer? The computer IP needs to be different from the camera IP but in the same range, for example:

```
camera: 192.168.1.80  
  
computer IP: 192.168.1.70  
subnet mask: 255.255.255.0  
gateway: 192.168.1.1
```

4. If all fails, please **reset the camera IP** either to a fixed (factory) IP or to DHCP:

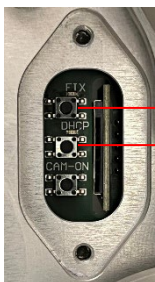

Push the button to reset the network settings:

**Fixed IP (192.168.1.80)**  
**DHCP**

} The current setting is indicated by a permanently lit green LED.

The camera needs to be connected to power.

Reboot the computer by turning the power off/on.  
Wait approximately 5 minutes for the camera to reinitialise.  
It may be necessary to repeat this procedure.

### 3.4 Firewall settings

The following ports need to be opened on the firewall to allow communication between Livecam and external servers:

Port (in/out)	Remarks
80	VPN connections – binary packets may not be blocked
443	Uploader (https)
123	Time synchronisation with time servers
dns queries	Remarks
DHCP	In 1st priority, use the DNS assigned via DHCP if not available:
1.1.1.1 : 53	CloudFlare DNS - dns queries allowed via port 53
8.8.8.8 : 53	google - dns queries allowed via port 53
ntp	Remarks
via Port 123	If not allowed in the network, define an internal NTP

### 3.5 Network security

It is possible to limit connections in firewall settings to the following allowed addresses (whitelist):

#### Uploader (443)

- gateway.roundshot.com
- backend.roundshot.com
- endpoint.roundshot.com, endpoint1.roundshot.com, endpoint2.roundshot.com

#### VPN (80)

- vpn.roundshot.com

#### Time sync (123)

ntp.metas.ch, time.c.nist.gov, time.nrc.ca, ntp.nml.cfiro.au, time.stdtime.gov.tw



The Livecam computer connects to the VPN server via port 80. This initial login takes approximately 5-10 minutes after rebooting. The connection for image upload is also initiated from the Livecam computer via port 443 to gateway.roundshot.com



**Cyber Security:** If the Livecam computer is installed in a network, it must be protected from unauthorized external access by a firewall. The ports must be configured to allow only the connections listed above between the Livecam computer and roundshot servers.

## 4. Technical Data



**Livecam gen 6**

<b>camera type</b>	digital stitching + video camera
<b>output</b>	jpg images up to 360° + h264/mp4 videos
<b>image resolution</b>	3.5k vertical resolution
<b>total image resolution</b>	up to 144 million pixels (360°)
<b>video resolution</b>	4k video
<b>lens focal length (from/to) + field of view (degrees)</b>	10mm: 69° x 360° 24mm: 35° x 360°
<b>vertical tilt</b>	motorized / variable
<b>capture rhythm</b>	1 panorama every 10 minutes 1 HDR panorama at night every 20 minutes 1 min. video sequence in between
<b>ideal capture schedule</b>	day + night (24h)
<b>dimensions height x width x depth</b>	47 x 30 x 27 cm height includes shaft of 8cm height with 4G antenna: +13cm
<b>weight</b>	7.8 kg with 4G antenna + 0.5 kg

## 4. CE Conformity Declaration



Seitz Phototechnik AG  
Frauenfelderstrasse 26  
8512 Lustdorf / Switzerland  
ph: +41 52 369 68 00  
info@roundshot.com www.roundshot.com



We declare under our own responsibility that our product

### Livecam Generation 6

is compliant with the main requirements of machinery directive 2006/42/EG.

The following standards have been applied:

Standards		Results
EN 55032:2015+A1:2020+A11:2020 CISPR 32:2015+AMD1:2019	Electromagnetic compatibility of multimedia equipment – Emission requirements	PASS
EN 55035:2017+A11:2020 CISPR 35:2016	Electromagnetic compatibility of multimedia equipment – Immunity requirements	PASS
EN IEC 61000 6 2:2019 IEC 61000 6 2:2016	Electromagnetic compatibility (EMC) – Part 6 2: Generic standards Immunity for industrial environments	PASS
EN IEC 61000 6 3:2021 IEC 61000 6 3:2020	Electromagnetic compatibility (EMC) – Part 6 3: Generic standards Emission standard for residential, commercial and light industrial environments	PASS

Date and location:

Lustdorf / Switzerland, 3 February 2026

Seitz Phototechnik AG

Peter Seitz

Werner Seitz

Attachment:

Eurofins test report

# Impressum



**Copyright 2026** by

Seitz Phototechnik AG  
Frauenfelderstrasse 26  
8512 Lustdorf / Switzerland

ph: +41 52 369 68 00  
email: [info@roundshot.com](mailto:info@roundshot.com)

[www.roundshot.com](http://www.roundshot.com)

Technical changes reserved  
February 2026

